

FINISHING TOUCHES

FOR YOUR HOME

INSTALLATION INSTRUCTIONS

Drill-Free Roller Blinds

A tension-fitted roller blind installs inside the window reveal without a single hole drilled into the frame or plaster. Follow the eight steps in this guide and your blind will be up, level and secure in about fifteen minutes.

TIME

15 minutes

TOOLS

None required

FIXINGS

Supplied in box



01 Unpack and check the fittings

Inside the packaging you will find a small bag containing two double-sided adhesive pads, a control chain guide, and a wall plug and screw for installing the guide.

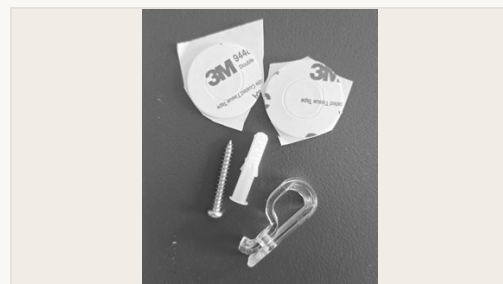


FIGURE 1

02 Test the fit in the reveal

Push in the spring-loaded adjusting wheel, position the blind inside the window reveal, then release the wheel. The blind should sit slightly loose — that slack is taken up later when you tighten the wheel.

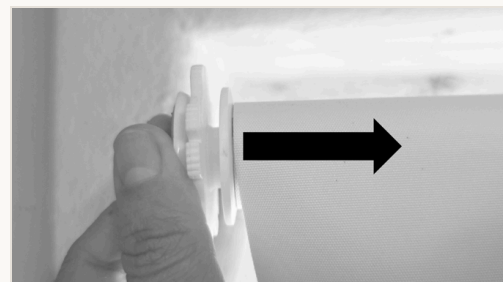


FIGURE 2

03 Apply the adhesive pads

Remove the blind from the reveal. Fix one double-sided pad to the adjusting wheel end and the other to the control chain end.



FIGURE 3 · ADJUSTING WHEEL END



FIGURE 4 · CONTROL CHAIN END

04 Set the blind in position

Push in the adjusting wheel again, lift the blind into the reveal and release. Nudge it left or right until it sits square and centred.



FIGURE 5

05 Turn the adjusting wheel to tension

Rotate the adjusting wheel. This expands the adjusting screw against the reveal and locks the blind firmly in place.



FIGURE 6 · TURN THE WHEEL



FIGURE 7 · SECURED IN PLACE

06 Check it holds

Pull gently downwards on the blind to confirm it is properly secured before you let go.

07 Read and remove the warning tag

Read both sides of the safety tag attached to the blind, then remove it.

08 Fit the control chain guide

This step is optional. Steps 1–7 need no drill and no tools at all — the chain guide is the only part that does, so leave the chain free if you would rather keep the installation completely tool-free.

If you do fit it, fix the guide to the inside of the reveal with the wall plug and screw provided, using a drill and screwdriver. The chain should sit slightly loose rather than under tension.



FIGURE 8

CHILD SAFETY

Looped control chains are a strangulation hazard. Keep chains out of the reach of young children, position cots and furniture away from the window, and always fit the supplied chain guide in a child's room.